

When troubleshooting the BOSS Dump Trailer Charging System, refer to the LED indicator light to determine the status of the system.

The indicator LED logic and system fuse locations can be seen below.

Refer to the second page for a troubleshooting tree to help walk you through the steps to find and repair any issues.

INDICATOR LED LOGIC

LED	CONDITION	ACTION NEEDED	TOWING VEHICLE ENGINE STATUS
Solid Green	Charging Mode	None	Running
Slow Flashing Green	Batteries in good state of charge (more than 12.4 volts)	None	Off
Slow Flashing Orange	Battery in low state of charge (voltage between 6.0 and 12.39 volts)	Charge and test battery	Off
No LED	Open circuit from battery positive and the dump trailer charge controller, or disconnect ground in battery box	Repair circuit by repairing the wire or replacing the fuse	Off

FUSE LOCATIONS



